


Instructions for installing the anti-tilt pin

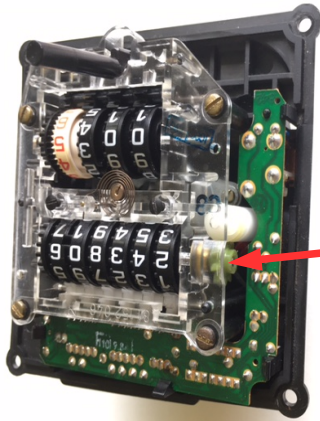

It is sometimes possible that the axis of the main digit roller tends to come out of its housing.

The function of the pin is to prevent this.



Place the pin against the transparent frame, opposite its supports, and push it upwards in the direction of the arrow.



It will clip firmly onto the axes.

that's done, it's in place!